Artison Uplift

The very quick & easy installation guide

Before you start - Note the light coverage from the existing lamp & take a picture before you start. In this example, the picture light coverage is only 1/3 of the way down the canvas and illuminates the wall behind and frame better than the painting. The temperature of the lamp is high and has been recorded at 83.5 °C. This along with the UV light that the lamp emits is very damaging to the painting. Our Artison Uplift solution will overcome all these issues and pick out the finer detail at the base of the painting.

1. Layout your picture light on a clean surface



2. Turn it over and unscrew the 2 retaining screws holding the lamp holder to the head



3. Remove the lamp holder & lamp



4. Detach the arm and extract the wire from within it



5. Clean and dry the inside of the head to aid adhesion



6. Place the universal adaptor over the arm connection point in the head to ensure it fits and familiarise yourself with where to attach it. When ready, put the double sided tape to the reverse of the adaptor and then press it on to the head above the central point



7. Thread the wire from the back of the uplift bar through the adaptor and down the arm



8. Reconnect the arm and then clip the uplift bar in to the universal adaptor



9. Rotate the uplift bar from front to back





10. Check that it works when powered up



11. When you position your painting back on the wall you will be able to finely tune the light by rotating the bar forwards and backwards to give optimal light coverage





Before and after coverage below:





Address 37 Henley Fields Maidstone Kent ME14 5UY

Mobile +44 (0)779 358 1314 Telephone +44 (0)162 292 0021 Email iain@heritagelightingmatters.com Web www.heritagelightingmatters.com **Company Registration** Number: 12236546 VAT Registration Number: 334240338